

I



-30 ~70

5%~95%RH

I



RSR10-01G 4G

I



10cm

I





4G



RSR10-01G

AC: 100~240V 50-60Hz

DC: 12V/1A

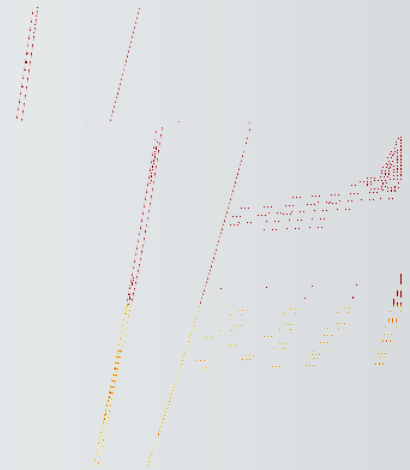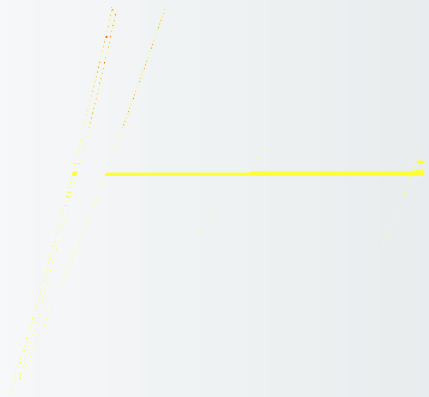



WEB

RSR10-01G

console

web

PC

PC

1

PC IP

192.168.1.2~ 192.168.1.254

255.255.255.0

192.168.1.1

192.168.1.1

WEB

admin/admin

欢迎使用 RSR 路由器 WEB 管理系统

登录
请输入您的用户名和密码:

用户名:

密码:


登录


[忘记密码怎么办?](#)


RSR

在线客服

Telnet

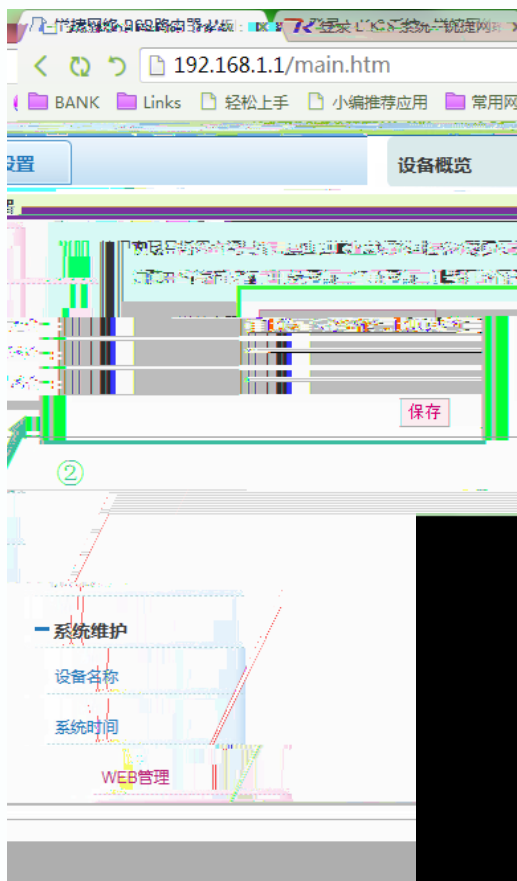

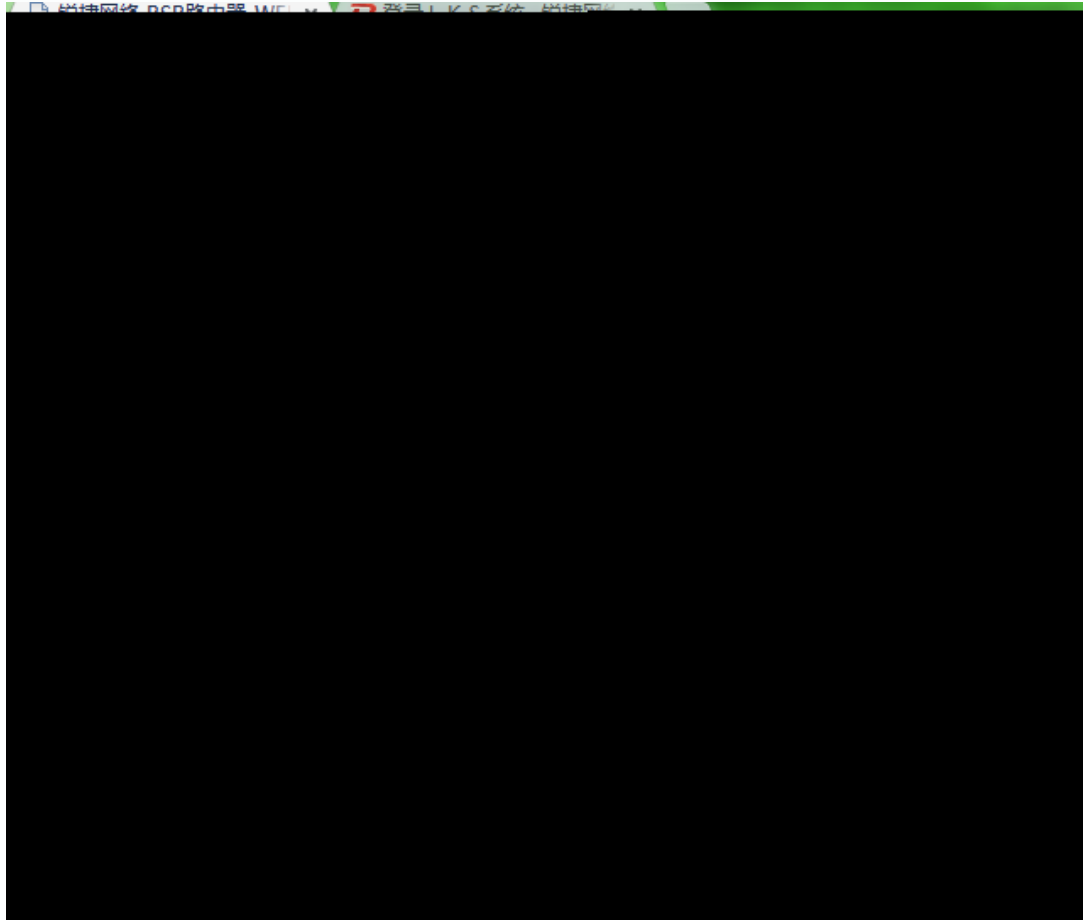

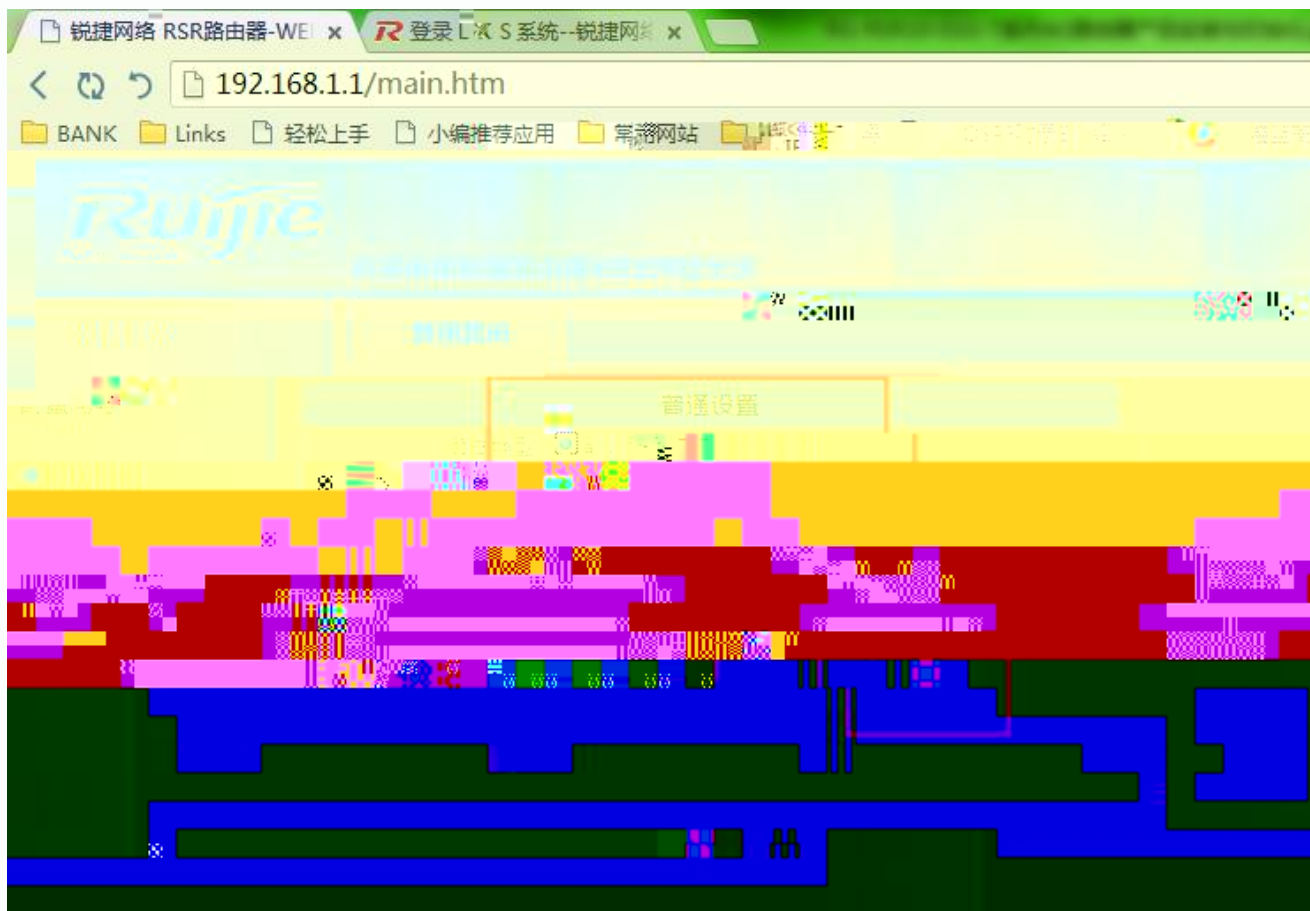




web

Telnet



Router(config)#ip route 0.0.0.0 0.0.0.0 cellular 0/0 // 4G

Ruijie(config)#exit //

Ruijie#write // " write "

Ruijie#show running-config // " show running-config "

